

EchoVerb

Digital Delay & Reverb Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V DC, ⊕-⊖-⊕, center negative. Please do not use an AC adapter which supplies more than 9V DC. Unplug the AC power adapter when not in use or during electrical storms.

Connections

Always turn off the power and all other equipment before connecting or disconnecting. This will help prevent malfunction and damage to any of the devices. Make sure to unplug all connection cables and power cords before moving this unit. To avoid deformation, discoloration, or other serious damage,

do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessively dusty or dirty location
- High humidity or moisture
- Strong vibration or shock

Interference with other electrical devices and Cleaning

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions. Clean only with a soft, dry cloth.

Handling

Do not apply excessive force to the switches or controls. Do not let paper, metal, or other objects into this unit. Take care not to drop the unit, and do not subject it to shock or excessive pressure.

FCC certification


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Main Features

- High Quality Reverb and Digital Delay in one micro pedal
- Delay controls: TIME, FEEDBACK and LEVEL
- Reverb controls: TONE, DECAY and MIX
- Tap tempo functionality
- Small and compact size
- True bypass

Pedal layout

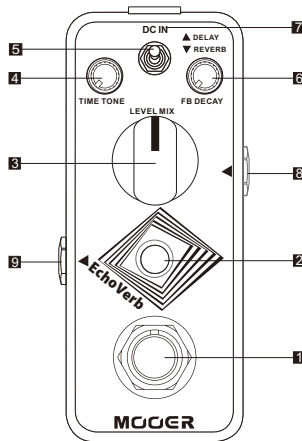

- 1. True bypass footswitch:** Engages and disengages the effect. Depressing the footswitch for more than 2 seconds will engage Tap Tempo functionality and the LED will flash. Tap the footswitch two or more times to synchronize the delay to your desired tempo. The pedal will revert back to normal operation after 5 seconds.
- 2. LED:** Displays the on/off status of the pedal. Provides instant access to Tap Tempo. Tap the LED 2 or more times to synchronize the delay to your desired tempo.
- 3. LEVEL/MIX control:** Adjusts volume of delay and wet/dry mix of reverb.
- 4. TIME/TONE:** Adjusts Delay time and Reverb tonality.
- 5. Controls switch:** Depicts which effect the controls are adjusting. Switch up to adjust Delay parameters switch down to adjust reverb parameters.
- 6. FB/DECAY:** Adjusts Delay feedback and Reverb decay.

- 7. DC in power jack:** Input for power supply, use a 9V DC regulated power supply ⊕-⊖-⊕, center pin negative.
- 8. Input jack:** 1/4" audio jack for connecting to the input device or instrument.
- 9. Output jack:** 1/4" audio jack, effect output for connection to amp or other devices.

Specification

Modes: Delay and reverb effects with tap tempo functionality.

Input: 1/4" mono audio jack. (Impedance: 470k Ohms)

Output: 1/4" mono audio jack (impedance: 100 Ohms)

Power requirements: AC adapter 9V DC ⊕-⊖-⊕, center negative. Highly recommend to use Mooger Micro Power.

Current Draw: 160mA

Dimensions: 93.5mm(D) x 42mm(W) x 52mm(H)

Weight: 146g

Accessories: Owner's Manual

**Notes : Any specification's update will not be amended in this manual.*